


Honeywell

UniLED

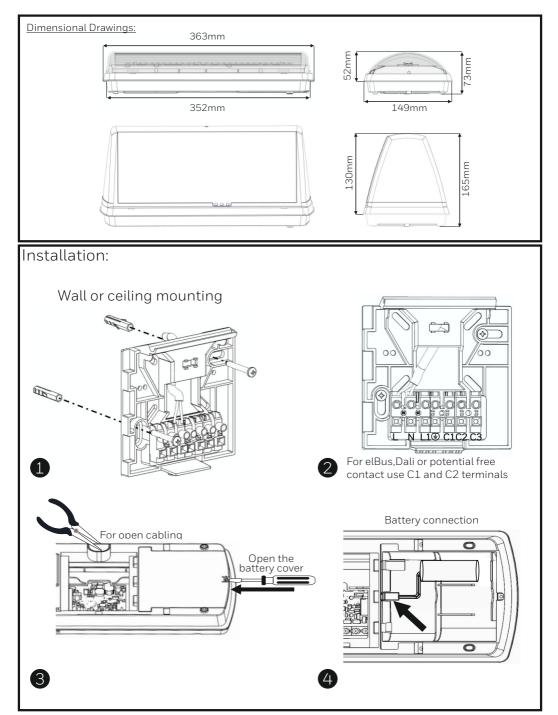

Honeywell Life Safety AS, Postboks 236, 1372 Asker

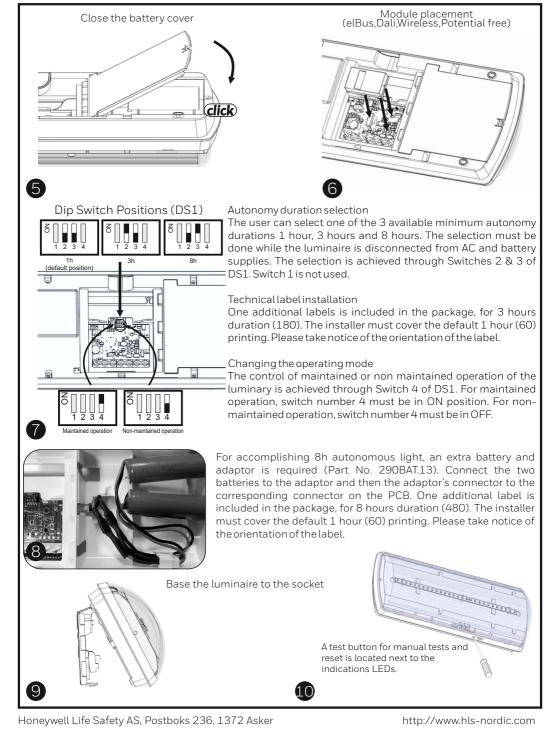

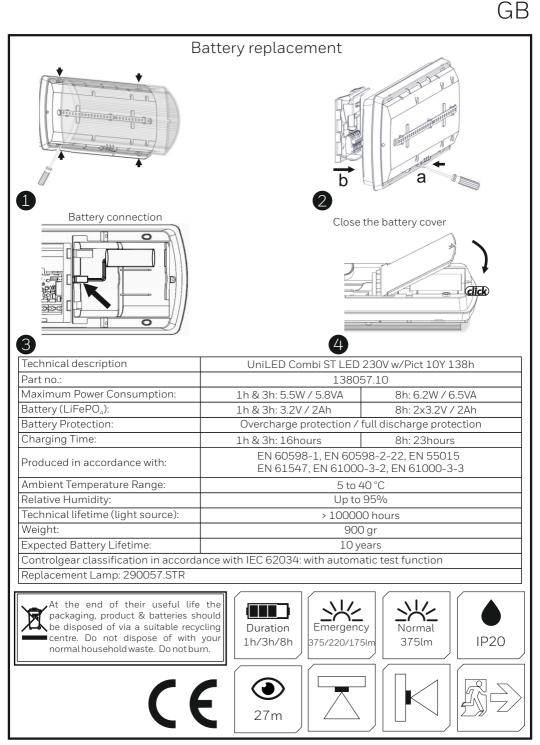

Honeywell Life Safety AS, Postboks 236, 1372 Asker

http://www.hls-nordic.com

| Indicator LEDs | | | Description | |
|---|------------|------------|--|--|
| GREEN |) YELLOW |) RED | Normal | |
| | 0 | 0 | Normat | |
| -XX- | \bigcirc | \bigcirc | Charging (battery test not possible while charging | |
| 0 | \bigcirc | \bigcirc | Mains off, battery not connected or charger fault | |
| 0 | | \bigcirc | Battery test | |
| \bigcirc | | \bigcirc | Battery fault | |
| 0 | \bigcirc | * | Light source test | |
| \bigcirc | \bigcirc | \bigcirc | Light source fault | |
| \bigcirc | \bigcirc | \bigcirc | Battery fault and light source fault | |
| | | | LED Status explanation | |
| Off | | | ©On -X Flashing | |
| The UniLED is a self-contained luminary with selftest function. it can be configured as maintained or non-maintained. | | | | |
| Selftest functions | | | | |

Every 15 days the luminaire will perform an emergency operation test. This will light the white LEDs for approximately 3 seconds. The red LED will flash during this test sequence. Every 6 months the luminaire will perform a battery condition test. The test will last for the stated duration. The white LEDs will be lit and the yellow LED will flash during this test sequence.

Note: When using DALI or Wireless communication, the frequencies and schedules for tests will instead be determined by the connected PC software.

Manual test functions

Emergency operation test:

Press the TEST button less than 5 seconds. The white LEDs light for about 3 seconds and the red LED flashes. Battery condition test:

Press the TEST button for 5 to 10 seconds. This test will last for the stated duration and can only be performed when the battery is fully charged (steady green LED). The white LEDs light and the yellow LED flashes. Resetting errors:

 ${\sf Press the TEST}\ button\ more\ than\ 10\ seconds\ to\ delete\ all\ indicated\ errors.\ The\ luminaire\ enters\ regular\ operation\ mode.$

In case that the luminaire no longer meets its rated duration of operation, the battery must be replaced. Important notice when installing luminaires within the same area!!!

To avoid that luminaires perform their battery test at the same day, connect the battery packs with more than 1,5 minutes in between.

Note: In case of mains power disconnection for a period of more than two months, the battery must be disconnected.

Note: In case of battery or light source replacement, these must be replaced with parts of the same type. The replacement must be performed by the manufacturer or a competent person.

Note: If the supply cable of the luminaire is damaged, it shall exclusively be replaced by a competent person in order to avoid hazard.