



Step 1: Install the required pictograms and fasten the screws.

Step 2: Install the plastic retaining clip.

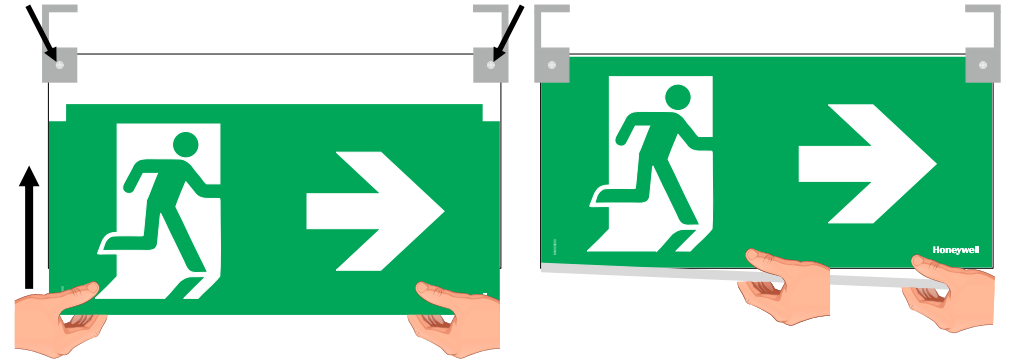


Step 1: Install the required pictograms and fasten the screws.


Step 2: Install the plastic retaining clip.

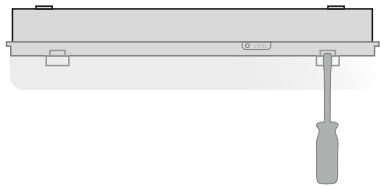


Step 3: Remove the diffuser.

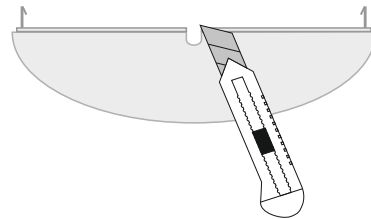


Step 4: Open the designated positions on both sides of the diffuser.

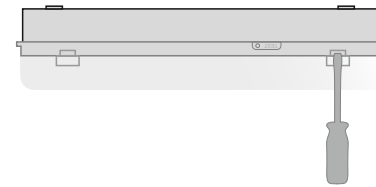


Step 3: Remove the diffuser.

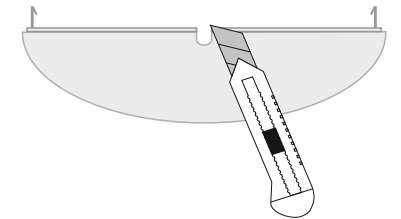


Step 4: Open the designated positions on both sides of the diffuser.

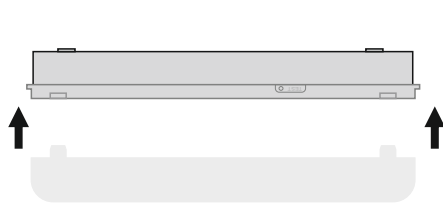


Step 5: Refit the diffuser at the luminaire.

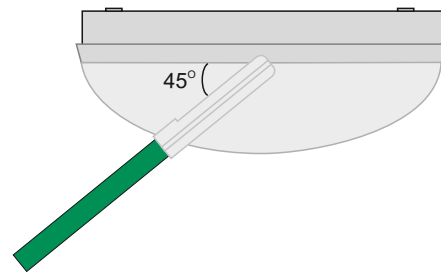

Step 6: Place the first side of the marking panel through the hole with an angle of 45°. Then place the second side.

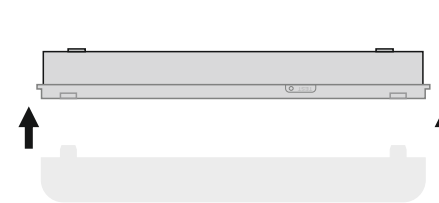

Step 5: Refit the diffuser at the luminaire.

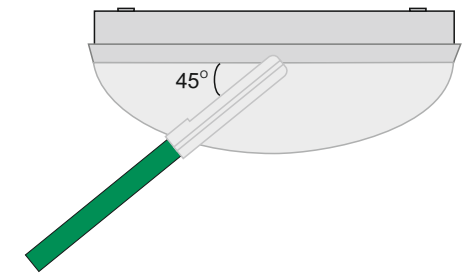

Step 6: Place the first side of the marking panel through the hole with an angle of 45°. Then place the second side.