




## LUMINAIRE PREPARATION

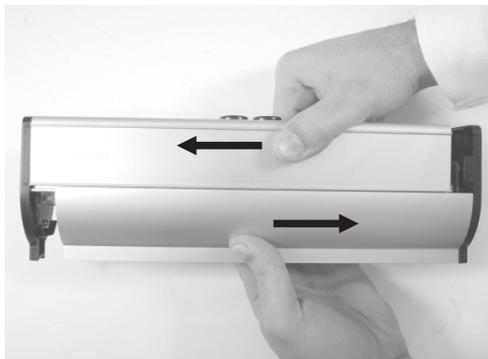

1. Dismantle the luminaire by sliding the mounting part as shown in the picture.

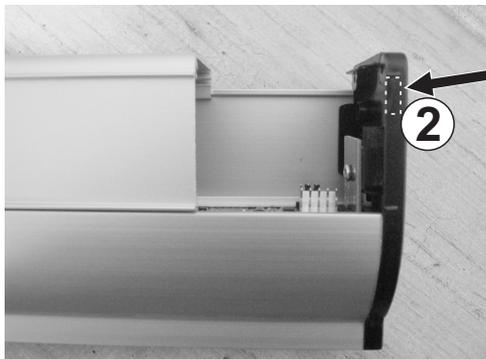


2. Cut the plastic for cable entry.

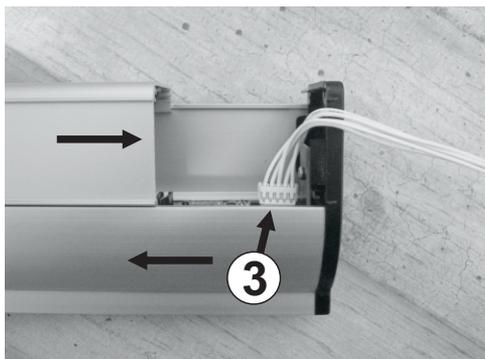

3. Connect the cable to the respective connector as shown in the picture.


4. Refer to the installation manual to complete the electrical connections and push carefully the electronics back until the side plastic reaches its original position.

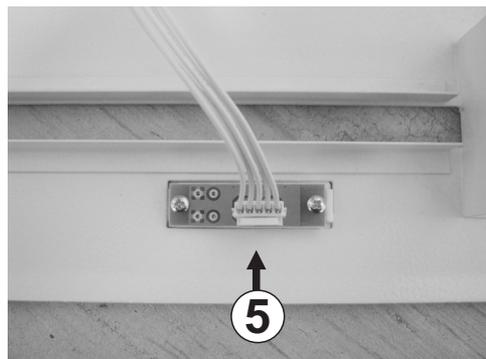

5. Install the indications plastic and connect the cable to the respective connector as shown in the picture.

6. Follow the next steps (page 2) to complete the installation.

## SUSPENDED CEILING PREPARATION

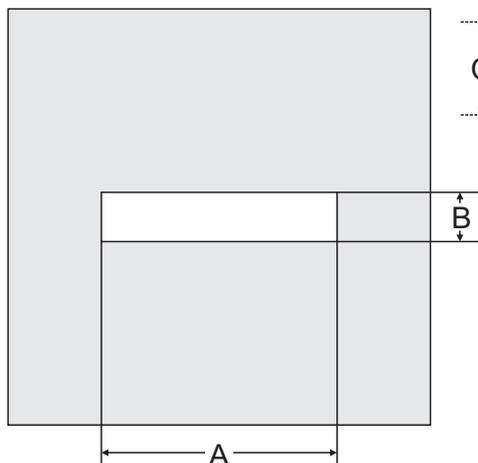



7. Open a hole.

A(L) = 31cm, B(W) = 7cm



8. Place the illumination sign in to the base.

C(H) = 9cm

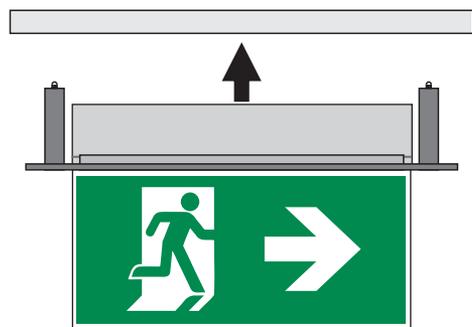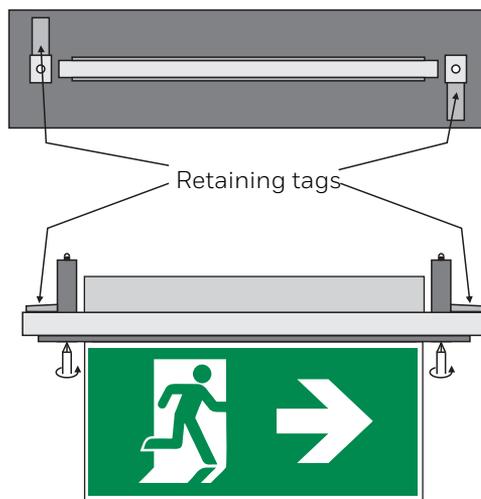

9. Push upwards the base. Make sure that the retaining tags are not expanded.

10. Fasten the two retaining screws clockwise and the retaining tags will expand until the base is securely installed.